Quick Start Guide

FanLinc™ INSTEON® Ceiling Fan and Light Remote Controller (Dual-Band)

Model: 2475F

FOR CEILING FANS ONLY

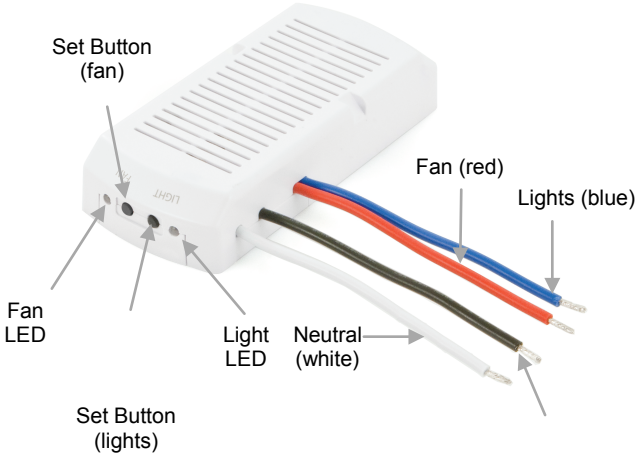

What's Included

- FanLinc
- Four (4) wire nuts
- One (1) cable tie

Installation

1) Using your fan pull chains, turn light on and set fan to highest speed. ***Note:*** *All fan and light controls will be conducted through FanLinc once installed.*
2) Turn off the breaker (remove fuse) supplying power to the fan's box.
3) Identify Line, Neutral and Load lines for light and fan separately.
4) Remove the ceiling fan from the electrical box.
5) Disconnect the wires from the ceiling fan and light (if applicable).
6) Connect FanLinc white wire and the fixture Neutral wire to the house Neutral with a wire nut.
7) Connect FanLinc blue wire to the fixture's light wire (if fixture does not have a light, cap the blue wire).
8) Connect FanLinc red wire to the fixture fan wire with a wire nut.
9) Connect FanLinc black wire to Line with a wire nut.
10) Ensure all connections are secure with no exposed copper.
11) Turn breaker back on.
    FanLinc Light LED will turn green.
    FanLinc Fan LED will turn red.

IMPORTANT: If you don't have home control software (HouseLinc) or a SmartLinc Hub, program all manual links now before reinstalling fan.

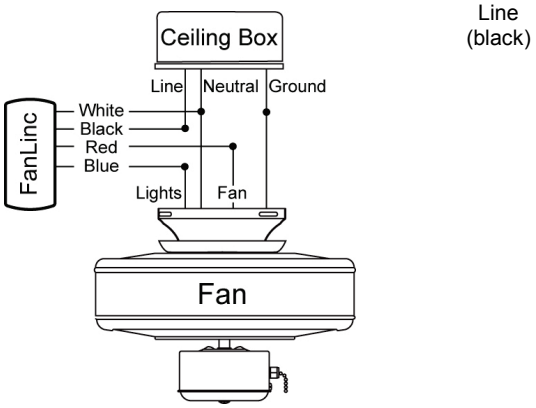

Program Fan as an INSTEON Responder

1) Referencing the table below, tap FanLinc Fan Set button until beeper and Fan LED indicate the desired fan speed. (For safety, fan will not spin when Fan Set button is tapped.)

1st	Low	Single beep	Blinks green slow
2nd	Medium	Double-beep	Blinks green medium
3rd	High	Fast double-beep	Blinks green fast
4th	Off	None	Red

2) Press and hold the scene controller Set button until it beeps.[1]
    Controller LED will start blinking.
3) Press and hold FanLinc Fan Set button until FanLinc double-beeps.
    Controller will double-beep[1] and its LED will stop blinking.
4) Temporarily hang fan from the mounting ring so the fan can spin safely. While clear of fan blades confirm the scene addition was successful by pressing On/Off on your controller.
    FanLinc Fan LED will toggle between green and red.
5) To program fan from another controller, turn fan off, remove from mounting ring and repeat steps 1-4.

Program Light as an INSTEON Responder

1) Press and hold controller button until it beeps.[2]
    Controller LED will start blinking.
2) Tap FanLinc Light Set button until the ceiling fan light is on.
    FanLinc Light LED will turn green.
3) Press and hold FanLinc Light Set button until FanLinc double-beeps.
    FanLinc Light LED will flash once.
    Controller will double-beep[3] and its LED will stop blinking.
4) Test by tapping On/Off on controller.
    Ceiling fan light will toggle between on and off.
5) To program light from another controller, repeat steps 1-4.

Reinstall Fan

1) Carefully remount cowling with FanLinc inside (or in electrical box).
2) Align cable tie with the notches of the FanLinc case, ensuring that cable tie and wires will not interfere with any moving parts. Secure to fan bracket.

Support

Owner's Manual and current Quick Start Guide:
http://www.insteon.com/support
Call: INSTEON Support Line at 800-762-7845

This device complies with FCC Rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
Le present appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorise aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radiolectrique subi, mme si le brouillage est susceptible d'en compromettre le fonctionnement.

[1] Most models
[2] If the controller does not have a beeper, wait until its LED begins blinking.
[3] Most models

2475F Rev. 7/5/2012 11:40 AM / See Owner's Manual for Warranty Information, Patented
© Copyright 2012, INSTEON, 16542 Millikan Ave., Irvine, CA 92606, 800-762-7845

INSTEON®